



Digital to Analog Converter (DAC)

Installation Instruction for hearTV

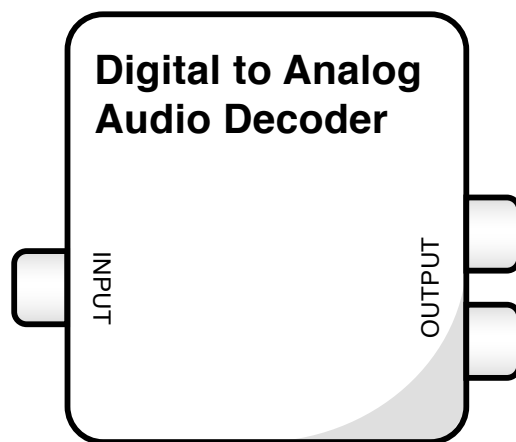

IN THIS BOX

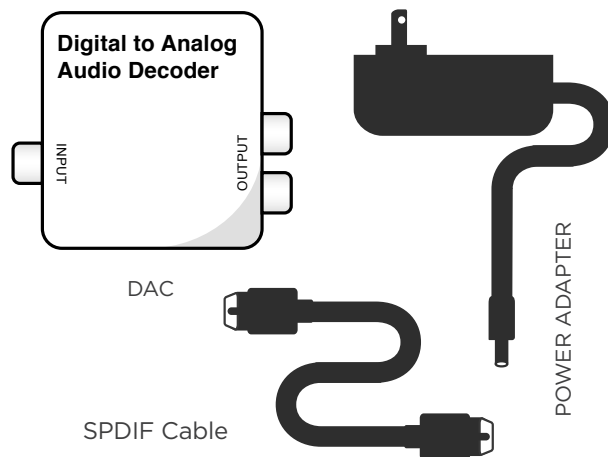

For additional support,
visit support.hearTV.com
or call (800) 334-3620 6 am
to 6 pm Mon – Fri

- 1 Determine** which type of output your TV has:

DIGITAL AUDIO OUT

Optical



Coaxial



ANALOG AUDIO OUT (DAC not required)

RCA



R

L

3.5 mm



If your TV has analog outputs, the DAC is not required

- 2 Plug** the appropriate digital audio cable to your TV's digital audio output.


▶ If using the included digital **SPDIF** cable, ensure the cable snaps into the connector when fully inserted.




▶ If a digital coaxial connection is required, you may use any standard RCA cable.




- 3 Connect** the other end of the digital audio cable to the **SPDIF** or **COAXIAL** input on the DAC

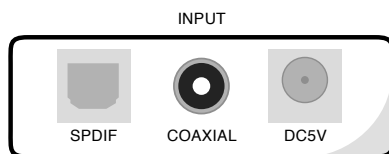


- 4 Set** the switch on the side of the DAC to the type of digital input being used.

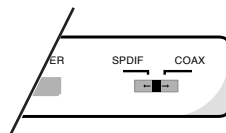


- 5** Your hearTV transmitter included two audio cables: a 3.5 mm to 3.5 mm cable and a short 3.5 mm to RCA adapter. **Connect** these cables together.

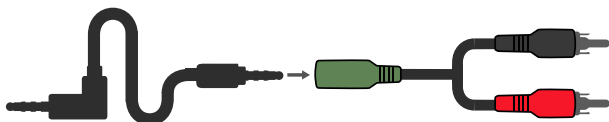


- 6 Plug** the red and black ends of the RCA adapter into the red and white **R** and **L** outputs on the DAC

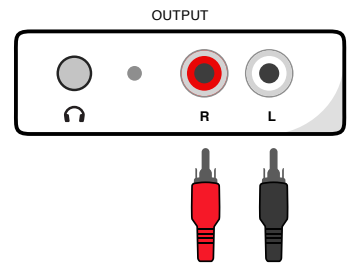

- 7 Plug** the 3.5 mm end of the cable into the audio input port on the front of your hearTV transmitter.

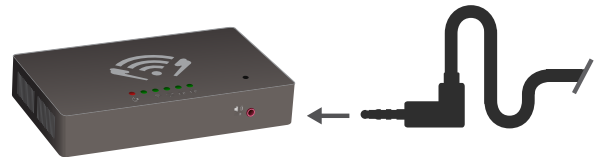

- 8 Connect** the included power supply to the DC5V input on the DAC.

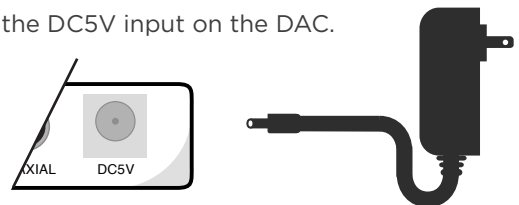

CAUTION: Do not connect the power supply for your hearTV transmitter to the DAC, as this will damage the DAC.

- 9 Plug** the other end of the power supply into the electrical outlet.

